 


USER MANUAL

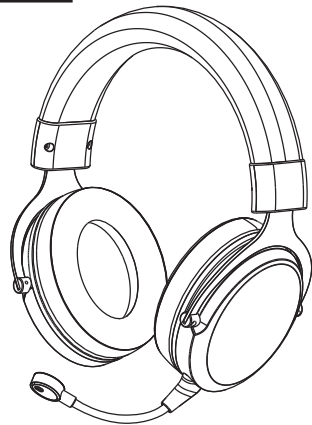


TEMPEST EMPEROR GHS PRO 20

WIRELESS RGB GAMING HEADSET

Package Content

1x Tempest EMPEROR GHS PRO 20 Headset	1x User manual
1x 2.4 GHz USB adaptor	1x 3.5mm audio cable
1x Charging cable	1x Microphone

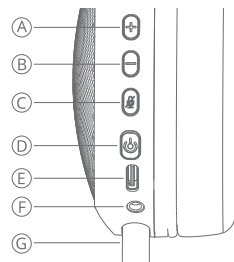 

Function List

- (A) Volume up button / Next track
- (B) Volume down button / Previous track
- (C) Mic mute button
- (D) Power button
- (E) Type-C charging port
- (F) 3.5mm audio port
- (G) Microphone port

LED Light Indicator (Power button)

Blue light flashes quickly	Search for signal
Blue light flashes slowly (Beep reminder sound)	Low battery level
Red light on	Charging
Red light off	Charge finished

LED Light Indicator (USB adaptor)

Red light flashes quickly	Search for signal
Red light on	Match code finished

Headset pairing

1. Press and hold the power button for 3-5 seconds.
2. After a beep reminder sound is heard, it enters the pairing mode.
The Bluetooth name of device is TEMPEST PRO20
3. When the red light of the receiver keeps on, it means that the pairing is successful.

Button Instructions

Power button Press and hold for 3 seconds to power on/off.

Volume +/- button Press to volume up/down;
Press and hold to switch next /previous song.

Mic mute button Press to mute the mic
(The indicator light of the USB adaptor will go off.)

Note: If the headset cannot pair with your device, you can press and hold the mic-mute button for 3-5 seconds to enter pairing mode. If the red indicator light on the headset is on, it indicates that the headset has been successfully connected.

Extend battery life

- Make sure to fully charge the battery before first use.
- Do not let the battery remain fully discharged for a long time. Keep the battery with some power to maximize the battery life.
- Unplug the USB charging cable immediately after the headset is fully charged.
- Place the headset in a room temperature environment. (20-30 °C)



 
Caution

- The headset must be fully charged before the first use.
- There is no need to fully discharge before recharging.
- The USB charging cable needs to use a high-power (USB 2.0 or better) port. Some USB ports on older devices do not support USB 2.0.

Headset connection (wired)

The headset can be used as a wired headset with the included 3.5mm audio cable.

1. Plug the 3.5mm audio cable into the headset jack.
2. Plug the other end of the 3.5mm audio cable into the device.

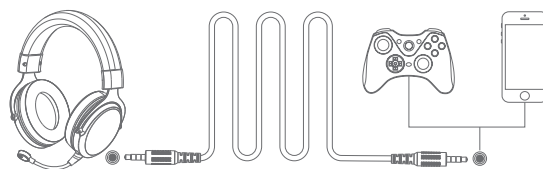


Headset connection (PC)

1. Insert the wireless transmitter into the USB connector of the PC.
The status indicator of the wireless receiver will flash, indicating that it is waiting for connection.
2. Press and hold the power button on the headset for 3s to turn on the power.
3. When the status indicator light of the wireless transmitter and the red indicator light on the headset is on, it indicates that the headset has been successfully connected.

Note: If this is your first time using this headset, you need to set the headset as a preset input and output device.

Headset connection and configuration (PS4, PS4 Pro)

 1. Turn on your PS4 game console.
2. Connect the wireless adapter to the USB port on the PS4.
The wireless adapter status indicator will flash to indicate that it is waiting to connect.
3. Press and hold the power button of the headset for 3 seconds to turn it on.
4. When the wireless adapter status indicator and the headset LED indicator are always on, it means that the headset is connected.

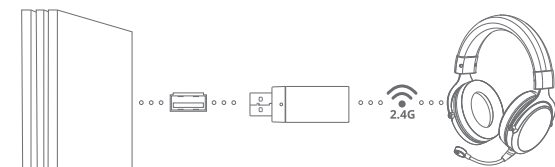

After detecting the 'USB Audio Device' device, configure the PS4m audio device as follows:

1. Navigate to the "Settings" menu and select it.
2. Highlight the device menu option and select it.
3. Scroll down to "Audio Devices" and select it.
4. Set the "input device" to TEMPEST PRO20.
5. Set "Output Device" to TEMPEST PRO20.
6. Select "Output to Headphone", and then select "All Audio".