



RGB Gaming Mouse

Number of keys: 7 buttons
 Backlit: RGB color
 Resistant braided cable: 1.8m
 Resolution: 1000-8400 dpi
 Maximal tracking speed: 32 ips

Maximum polling rate: 125Hz
 Current consumption: max 100mA
 Software: Support
 System: Win7/8/10



Gaming Headset

Frequency response :20-20000Hz
 Sound pressure level : 108±3dB
 Cable length: 1.8m
 Impedance: 32 Ohm
 Headphones
 Impedance : 32Ohm
 Sensitivity: 105 ± 3 dB
 Frequency range: 20 - 20,000 Hz

Membrane: 50 mm
 Connection type: 2*3.5 mm (3 pin) mini-jack
 Microphone
 Sensitivity : -56±3dB
 Microphone sensitivity: -58 ± 3 dB
 Microphone frequency range: 30 - 16,000 Hz

TEMPEST APOCALYPSE PRO

RGB KEYBOARD+GAMING MOUSE+MOUSEPAD+HEADSET
 ALL PLUG AND PLAY

QUICK GUIDE

RGB MECHANICAL KEYBOARD



Multimedia function

FN+A Play/Pause	FN+D Next	FN+G Volume -
FN+S Previous	FN+F Mute	FN+H Volume +

Backlight

FN+P Change the backlit mode: total 12 backlight mode effects

FN+Enter Change backlight color(8 different colors)

FN++ Increase the brightness of backlight (4 lever brightness)

FN+- Reduce the brightness of backlight (4 lever brightness)

FN+Q Reduce the speed of backlight (6 lever speed)

FN+W Increase the speed of backlight (4 lever speed)

FN+ right Shift Backlight mode rest to factory mode(long press FN+Shift for 5 seconds)

- * Caps Lock indicator turns to white flashing light when max.brightness/speed, or min. Brightness/speed.
- * When PC enter sleep and standby mode, keyboard backlight will switch off automatically after 10 minutes.
- * When PC wake up, keyboard enter the previous mode.

Fn combination keys

FN+1	F1 function-Help
FN+2	F2 function-Rename
FN+3	F3 function-Search for files
FN+4	F4 function-Opens the address list in the browser
FN+5	F5 function-Refresh
FN+6	F6 function-Appoints to the address bar in explorer or browser
FN+7	F7 function-Not available in Windows only in DOS Windows.
FN+8	F8 function-Press F8 to display the boot menu when starting the computer.
FN+9	F9 function-lower the volume in Windows Media Player.
FN+0	F10 function-menu Hold Shift+F10 to jump out of the desktop right-click menu.
FN+7	F11 function-Switch the image to full screen.
FN+Z	F12 function-Save as, when editing a picture or typing, quickly pop up and save as a file.
FN+ right Shift	(long press for 5 seconds) Backlight mode back to factory mode
FN+ Win	Win Key Lock (the Win Key white light stays on in the state of Lock), press FN+ Win key again and then release the Lock state (the Win Key LED works with the current special effect)
FN+ Right Alt / +Right Ctrl/Menu	←→↔
FN+U	Print Screen
FN+I	Scroll Lock
FN+O	Pause Break
FN+J	Insert
FN+K	Home
FN+L	Page Up
FN+M	Delete
FN+END	END
FN+-	Page down



TEMPEST
 MORE INFORMATION ON
www.tempestofficial.com