# USER MANUAL

# 77 TEMPEST **EMPEROR**

WIRELESS RGB GAMING HEADSET

### Package Content

1x Tempest EMPEROR GHS PRO 20 Headset 1x 2.4 GHz USB adaptor 1x Charging cable

1x 3.5mm audio cable by Microphono



# **Function List**

- Volume up button / Next track
- Volume down button / Previous track
- Mic mute button
- Power button
- F Type-C charging port
- F) 3.5mm audio port Microphone port

# LED Light Indicator (Power button)

Blue light flashes quickly

Red light off

Charge finished

Blue light flashes slowly (Beep reminder sound) Low battery level

Red light on Charging

# LED Light Indicator (USB adaptor)

Red light flashes quickly Search for signal Red light on

Match code finished

### Headset pairing

- 1. Press and hold the power button for 3-5 seconds.
- After a beep reminder sound is heard, it enters the pairing mode.
- The Bluetooth name of device is TEMPEST PRO20 3. When the red light of the receiver keeps on
- it means that the pairing is successful.

### **Button Instructions**

Power button

Press to volume up/down;

Maluma I / hustan

Press and hold to switch next /previous song.

Press to mute the mic Mic mute button

(The indicator light of the USB adaptor will go off.)

Press and hold for 3 seconds to power on/off.

Note: If the headset cannot pair with your device, you can press and hold the mic-mute button for 3-5 seconds to enter pairing mode. If the red indicator light on the headset is on, it indicates that the headset has been

# successfully connected. Extend battery life

- · Make sure to fully charge the battery before first use.
- · Do not let the battery remain fully discharged for a long time. Keep the battery
- with some power to maximize the battery life.
- · Unplug the USB charging cable immediately after the headset is fully charged. Place the headset in a room temperature environment. (20-30 °C)

# Headset connection (wired)

The headset can be used as a wired headset with the included 3.5mm audio cable. 1 Dlury the 3 5mm surfin cable into the headest isolo

2. Plug the other end of the 3.5mm audio cable into the device.



### Headset connection (PC)

- 1. Insert the wireless transmitter into the USB connector of the PC. The status indicator of the wireless receiver will flash, indicating that it is waiting for connection
- 2. Press and hold the power button on the headset for 3s to turn on the power.
- 3. When the status indicator light of the wireless transmitter and the red indicator light on the headset is on, it indicates that the headset has been successfully

a preset input and output device

### Headset connection and configuration (PS4, PS4 Pro)

- Turn on your PS4 game console.
- 2. Connect the wireless adapter to the USB port on the PS4
- The wireless adapter status indicator will flash to indicate that it is waiting to connect.
- 3. Press and hold the power button of the headset for 3 seconds to turn it on.
- 4. When the wireless adapter status indicator and the headset LED indicator are always on, it means that the headset is connected.



After detecting the 'USB Audio Device' device, configure the PS4m audio device as follows:

- 1. Navigate to the "Settings" menu and select it.
- 2. Highlight the device menu option and select it.
- 3. Scroll down to "Audio Devices" and select it.
- 4. Set the "input device" to TEMPEST PRO20.
- 5. Set "Output Device" to TEMPEST PRO20. 6. Select "Output to Headphone", and then select "All Audio".

### Caution

- . The headset must be fully charged before the first use.
- · There is no need to fully discharge before recharging.
- · The USB charging cable needs to use a high-power (USB 2.0 or better) port. Some USB ports on older devices do not support USB 2.0.