TEMPEST
G A M I N G

SPOOK

RGB GAMING CASE

COMPONENTS

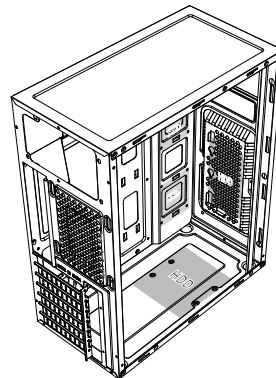| 1	2	3	4	5	6	7

1 POWER SUPPLY SCREW*6
2 IRON POST*3
3 MAINBOARD SCREW*18
4 HARD DRIVE SCREW*4
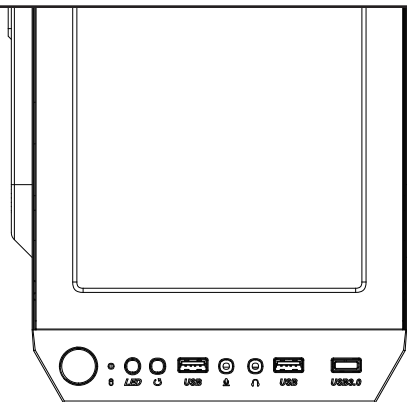5 HARD DRIVE GUIDE SCREW*2
6 HARD DRIVE MANUAL SCREW*3
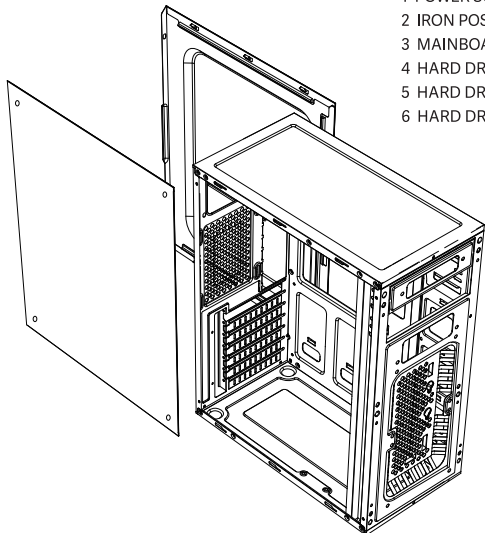
Remove the screw before removing the side panel.
Remove the side panel before removing the front panel

Description of hard disk installation location

• Wall-mounted SSD*2
  Note: lock screws to secure

• Front HDD*1
  Note: Open the panel for installation

• Bottom HDD*1
  Note: lock screws to secure on the bottom

H.D.D LED (GND)

+P LED

-P LED (GND)

POWER SW (GND)

Install power switch and LED signal line

Motherboard HD Audio connector		Motherboard USB connector		Motherboard USB3.0 connector
PORT1R	AUD-GND	VCC	VCC	
PORT1R	PRESENSE8	D-	D-	
PORT2R	SENSE1 RETURN	D+	D+	
SENSE SEND	NO PIN	GND	GND	
PORT2L	SENSE_RETURN		NC	

Install USB and audio input and output connector

case AzaliaHD Audio connector	case USB connector	case USB3.0 connector (Optional)
	USB	

TEMPEST